

# OAKTON®

## Food Safety Thermometer 35625-40

Multifunction Food Safety Thermometer



Scan



Probe



Monitor

## Food Safety Thermometer Specifications and Features

Infrared	<b>Temperature Range</b>	IR Channel -35°C to 275°C (-30°F to 525°F)
	<b>Accuracy</b> Assumes ambient operating temperature of 23°C ±2° (73°F ±4°F)	Between 0°C and 65°C (32 to 150°F): ±1°C (±2°F) Below 0°C (32°F): ±1°C (±2°F) ±0.1 degree/degree Above 65°C (150°F): ±1.5% of reading
	<b>Response Time</b>	<500ms after initial reading
	<b>Spectral response</b>	8-14 microns
	<b>Emissivity</b>	Pre-set at 0.97
	<b>Distance to Spot Size* Optical Resolution (D:S)</b>	2:5:1 @ 90% energy, typical
	<b>Typical Working Range (target illumination)</b>	≈12mm to 300mm (≈0.5" to 12")
	<b>Minimum Target Size</b>	12mm (0.5")
Probe	<b>Illumination to IR Channel Offset</b>	13mm (0.52")
	<b>Temperature Range</b>	-40°C to 200°C (-40°F to 390°F)
	<b>Accuracy</b> Assumes ambient operating temperature of 23°C ±2° (73°F ±4°F)	Between -5°C and 65°C (32°F to 150°F): ±0.5°C (±1°F) Below -5°C (23°F): ±1°C (±2°F) Above 65°C (150°F): ±1% of reading
	<b>Response Time</b>	7-8 seconds (3 time constants)
	<b>Probe Dimensions</b>	Diameter: 3.0mm (0.118") Length: 90mm (3.2")
	<b>Sensor</b>	RTD, Class A

## Food Safety Thermometer Specifications and Features

Operational

<b>Repeatability</b>	Within accuracy specifications of the unit
<b>Ambient Operating Range</b>	0°C to 50°C (32°F to 122°F)
<b>Relative Humidity</b>	90% (±5%) RH noncondensing @ 30°C (86°F)
<b>Storage Temperature</b>	-20°C to 60°C (-4°F to 140°F)
<b>Weight/Dimensions (with Battery)</b>	165mm x 32mm x 50mm (6.5" x 1.25" x 2") 150g (0.33lbs)
<b>Power</b>	9V Alkaline
<b>Battery Life (Alkaline)</b>	10 hours minimum @ 23°C (73°F)
<b>Target Illumination light info</b>	High Brightness LED
<b>Display Resolution</b>	4 digits, 0.2°C (0.5°F)
<b>Display Hold (7 seconds)</b>	✓
<b>LCD Backlit Display</b>	✓
<b>Temperature Display</b>	-40°C to 200°C (-40°F to 390°F)
<b>Standards</b>	Conforms to EN 61236-1 Electromagnetic Emissions and Susceptibility, EN6101-1 General Safety, Sealing IP65 (hand washable, non-submersible)


Other

<b>Certifications</b>	CE
<b>Warranty</b>	1 year
<b>Accessories</b>	Nylon Carrying Pouch, QuickStart Guide

\*At calibration geometry of 279 mm (11"0 with a 140mm (5.5") diameter, 0/97 emissivity blackbody. Specifications subject to change without notice

# Figure 1/Graphique 1/Figura 1

## HACCP Zone Indicators / Indicateur zone HACCP / Indicadores de Zona

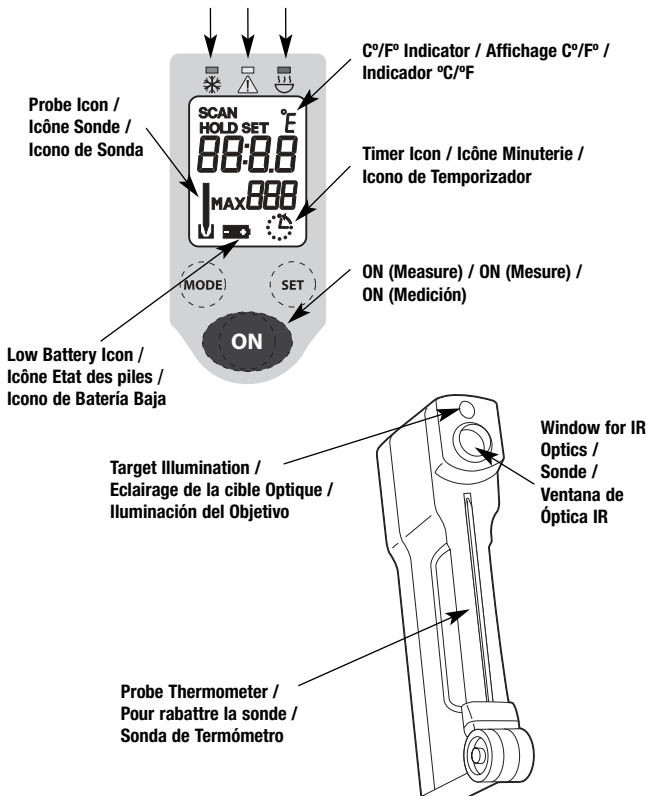

## Language Sections

English language section . . . . .	7
------------------------------------	---

## Table of Contents

Product Statement . . . . .	7
Proper Application and Operation . . . . .	8
Noncontact (Infrared) Temperature Measurement Applications . . . . .	12
Field Verification of Accuracy . . . . .	14
Setting/Changing °C / °F Temperature Scales . . . . .	18
Battery Insertion / Replacement . . . . .	19
Certifications . . . . .	20

## Product Statement

Thank you for purchasing this food safety thermometer. We are confident that you will be pleased with the quality and performance of this product. Please take a few moments to familiarize yourself with the operation, features, and benefits of this fine product. This food safety thermometer combines two precision thermometers in one unit: a specially calibrated noncontact infrared thermometer (IRT) and a resistance thermal device (RTD) penetration probe. The noncontact mode can be used for quick scans of a surface temperature, while the probe mode is used to accurately measure internal temperatures.

## Proper Application and Operation

### Before You Start

First time users should reference “Battery Insertion Replacement” before using the unit, page 19.

### Noncontact (Infrared) Mode

Pressing and holding the ON button starts the food safety thermometer in noncontact (infrared) measurement mode. The measurement will continue as long as the ON button is depressed, indicated by the blinking “SCAN”. When the button is released, “HOLD” appears on the display and the last measurement remains visible for 7 seconds before the display goes blank. When the button is released, “HOLD” appears on the display and the last measurement remains visible for 7 seconds before the display goes blank.

The unit will display the temperature of an area highlighted by the target illuminator. The maximum reading is indicated in the lower portion of the display. (*Figure 2*).

**Note:** The infrared temperature measurements are used for screening and measuring surface temperatures only. Critical internal temperatures must be verified by using the probe.

### Mode Selection

The MODE button has two functions. Pressing the MODE button after the display has gone blank will recall the last display. Pressing the MODE button with an active display cycles through the three different operating modes: Noncontact, Probe, and Countdown Timer.

(*Figure 3*).

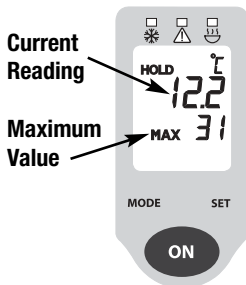


Figure 2


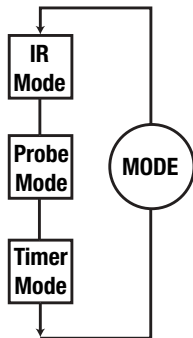



Figure 3  
IR Mode Display

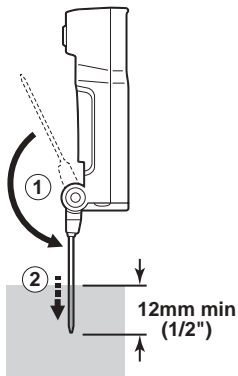

**Figure 4**  
**Extended Contact Probe**

### HACCP Zone Indicators

Probe Icon

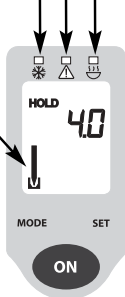

**Figure 5**  
**Probe Mode Display**

## Probe Mode

To measure the internal temperature of an object, extend the probe (*see Figure 4*) and press the MODE button until the Probe Icon is displayed (*see Figure 5*). Insert the probe at least 12mm (1/2") into the target and press the ON button to measure the core temperature.

The Probe Icon on the display will blink for approximately 15 seconds as the probe comes to equilibrium with the object being measured. Three short beeps will sound to indicate the reading is complete and the temperature will be shown on the display. When the highest accuracy is required, it is advisable to repeat the measurement cycle to insure the probe has fully stabilized and reached equilibrium with the object.

**Note:** Remember if the display blanks the mode button will recall the last measurement.

**Note:** The probe tip must be sterilized before and between measurements of food samples to avoid cross contamination.

## Countdown (Timer) Mode

The food safety thermometer has a built in countdown timer to conveniently monitor cooking, cooling, and critical exposure times, as well as Hazard Analysis Critical Control Points (HACCP\*) inspection intervals. HACCP principles and good food safety practices require monitoring the length of time perishable foods

are exposed to temperatures that may support rapid bacterial growth.

To set the countdown timer, press the MODE button until the timer icon is displayed (**Figure 6**). Press the SET button once to enter the set mode (“SET” on display blinks). Press the SET button a second time to clear and increment the timer value. The timer value increase initially by 10 second intervals then by minutes and hours. The timer can be set for a maximum of 7 hours and 59 minutes.


Once the desired timer value is set, pressing the ON button will start and stop the countdown. An alarm will sound for approximately 30 seconds when the timer reaches zero.

**Note:** The timer can be activated and running in the background (indicated by the flashing timer icon) during either IR or Probe measurements or when the display is off. Pressing any button will silence the sounding alarm.


To clear the displayed timer value, press the SET button once to enter set mode and a second time to zero the timer value.

## HACCP\* Check

This thermometer incorporates a “HACCP Check” feature to graphically display critical temperature zones. The icons and LED indicators located above the display indicate a food product is safely held at a sufficient holding temperature, or if it has fallen within the unsafe HACCP “Danger Zone” temperatures.

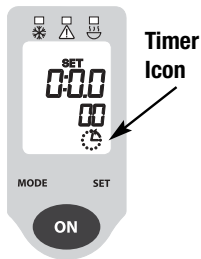

**Figure 6**  
**Countdown Timer Display**

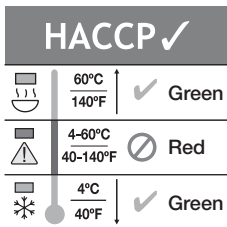

**Figure 7**  
**Zone Measurement Map**

The HACCP Check indicators operate in both the Noncontact and Contact modes. The indicator light will flash during an active measurement and will be lit steadily during display Hold or Recall (**Figure 5**).

- A Green LED indicator shows a safe chilled or frozen condition below 4°C (40°F) or a safe holding temperature above 60°C (140°F).
- The Red LED indicator light is displayed when temperatures are within the HACCP “Danger Zone” of 4°C to 60°C (40°F to 140°F) where microbe growth occurs most rapidly (**Figure 7**).

**Note:** When the temperatures within  $\pm 1^{\circ}\text{C}$  ( $\pm 2^{\circ}\text{F}$ ) of the HACCP “Danger Zone” boundary, both the relevant Green and Red LED indicator lights will be triggered to alert the user of the border temperature.

**Note:** Whenever the Red LED indicator light is lit it is necessary to evaluate the safe storage and handling rules dictated by both exposure time and temperature.

## Noncontact Temperature Measurement Applications

### Measuring Liquid Temperatures


To accurately measure the temperature of liquids and semi-liquids, such as soup, chili, salad dressing, etc., stir the liquid to bring the internal temperature to the surface, while taking a measurement with the unit in noncontact mode. Steam, dust, smoke, etc., can prevent accurate measurement by interfering with the energy emitted from the target. To increase the reliability of the measurement, do not hold the unit directly over a steaming or smoking product. Instead, hold the unit back and at an angle to ensure the most accurate measurement (*Figure 8*).



**Figure 8**

### Measuring Packaged Products in Cold Storage Cases

Ideally, the temperature of a product should be measured outside of a refrigerated environment whenever possible. If it is necessary to measure the product in a refrigerated environment such as a walk-in cooler, either make rapid measurements (within 1 minute or less) or allow 30 minutes for the unit to stabilize in the refrigerated environment (above 0°C / 32°F) before measuring. To measure an item within a storage case, open the door or curtain, and directly scan the product for uniform temperatures. The presence of warmer areas may indicate improper stocking resulting in blocked airflow in the cabinet.

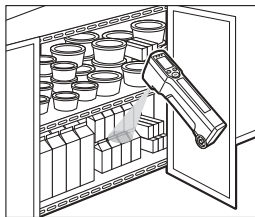

**Figure 9**

## Measuring Food at the Receiving Dock

Use the food safety thermometer to accurately measure perishable products at the receiving dock. When a delivery of fresh or frozen food arrives, check that the products, shipping crates, and internal temperature of the delivery truck are all at the proper storage temperatures. Check for warm spots in products that can result from improper stacking and airflow.

## Measuring Food in Holding and Serving Areas

Use the noncontact thermometer to easily scan and accurately measure surface temperature of products held in hot or cold holding areas, such as open-top refrigeration units, steam tables, salad bars, fresh meat or fish displays and warming ovens.

Use the HACCP Check feature quickly identify if unsafe temperatures within the HACCP “Danger Zone” of 4°C to 60°C (40°F to 140°F) by slowly scanning across the surface of food, storage containers, the contents of deli cases, chilled salads and desserts, holding ovens, rotisseries, etc.

**Note:** If any questionable temperatures are indicated or if temperature readings are within  $\pm 1^{\circ}\text{C}$  ( $\pm 2^{\circ}\text{F}$ ) of the HACCP “Danger Zone” boundary, use the probe to check internal temperatures.


## Field Verification Of Accuracy

### Infrared (IRT) and Probe channels (RTD)

Follow the steps below to verify the accuracy of your food safety thermometer. The 0°C (32°F) “stirred ice bath” is the recommended verification reference point. Since it is more difficult to measure the surface of hot water, the hot verification should be used only as a general accuracy check of the IRT channel.

### Cold Temperature Verification Check

1. Fill a large styrofoam cup halfway to the surface with ice cubes. Add cold water to just below the rim of the cup.
2. Immerse the tip of a known calibrated probe thermometer (reference probe) into the water and stir the mixture with the probe for one minute, or until the probe temperature stabilizes.
3. Continue stirring the water with a straw or swizzle stick while taking simultaneous temperature measurements with the reference probe and the IR thermometer. The unit should be held within 3 inches of the surface of the water (**Figure 10**). To insure measurement accuracy the probe tip must be immersed to a minimum depth of 12mm (1/2”).

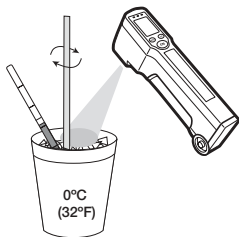

**Figure 10**


The noncontact (IRT) measurement should be within  $\pm 1^{\circ}\text{C}$  ( $\pm 2^{\circ}\text{F}$ ) of the reference probe reading (nominally 0°C (32°F)).

The probe temperature reading should be within  $\pm 0.5^{\circ}\text{C}$  ( $\pm 1^{\circ}\text{F}$ ) of the reference probe reading.

### Hot Temperature Verification Check

1. Follow the same procedure as above, substituting hot water ( $>140^{\circ}\text{F}/60^{\circ}\text{C}$ ). Hot tap water is adequate for the procedure.
2. Repeat steps two and three from above.

**Note:** Due to evaporative cooling on the surface of the hot water, it is particularly important that the surface of the water be continually stirred while making the IR measurement (**Figure 11**).

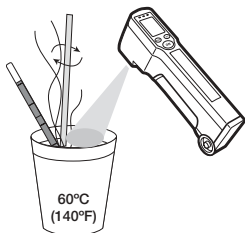

**Figure 11**


Using this method, the noncontact (IRT) channel should be considered accurately calibrated if the reading is within  $\pm 2^{\circ}\text{C}$  ( $\pm 3.5^{\circ}\text{F}$ ) of the reference probe's reading; the unit's probe reading should be within  $\pm 0.5^{\circ}\text{C}$  ( $\pm 1^{\circ}\text{F}$ ) of the reference probe reading.

### Cautions

- Hold the noncontact thermometer outside the rim of the cup, approximately 3 inches from the surface of the water.
- Avoid steam condensation on the unit's lens. If condensation forms, carefully wipe the lens or let it dry at room temperature and resume measurement.

## Field of View


The ideal working range of the noncontact thermometer (IRT) is between 2cm and 25cm (1 and 10 inches). The field of view is a circular measurement area approximately equal to the distance from the target to the unit, divided by 2. The built in target illumination beam helps to indicate the measurement area. To ensure accurate measurements, the measurement target must fill or exceed the field of view. When conditions permit move in closer to the subject (*Figure 12*).

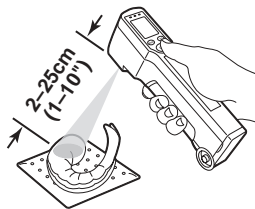

**Figure 12**

## Operating and Ambient Temperature Range

The food safety thermometer is designed to operate in environments between 0°C–50°C (32°F–120°F). Avoid subjecting the unit to extreme or abrupt changes in ambient temperatures. Allow the unit to stabilize for a minimum of 30 minutes if exposed to rapid temperature changes. Failure to precondition the instrument to the ambient temperature may result in measurement errors. (*Figure 13*)

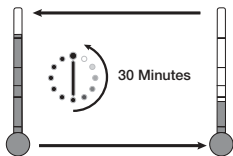

Hot to Cold and Cold to Hot

**Figure 13**

## Response Time

The response time of the instrument from initial start up is approximately 1 second. The temperature display is updated at approximately 2 times per second during sustained operation.

## Humidity

Noncontact thermometers (IRTs) are not intended for use in extremely humid or condensing environments. Condensation on the lens window will impede the optical performance and prevent accurate temperature measurements. If this occurs, allow the window to dry by evaporation or wipe with a soft cloth and resume measurements.

## Emissivity

A noncontact thermometer (IRT) determines temperature by measuring the emitted energy of an object. Emissivity (E value) is the measure of an object's ability to emit infrared energy.

This noncontact thermometer is specially calibrated for high emissivity targets and is preset to an E value of 0.97. This setting is the most advantageous for capturing the emitted energy from water, oils, shortening, fat, vegetables, as well as frozen, partially frozen and refrigerated products in boxes and plastic containers.

**Note:** Shiny metal surfaces (such as polished or stainless steel) have low emissivities and reflect the energy of their surrounding, resulting in inaccurate temperature readings. The emissivity of shiny metal surfaces can be enhanced to provide more accurate readings by covering the measurement area with masking tape, flat black paint, or a coating of shortening or oil. Blackened cooking surfaces such as griddles and cast iron pans make good targets.

## Setting/Changing °C and °F Temperature Scales

The food safety thermometer can display temperature in either the °C (Celsius) or °F (Fahrenheit) scales. The desired scale is selected at the time the battery is installed:

### Selecting the °C Scale:

When the battery is connected to the battery leads the °C scale indicator shows on the display for approximately 15 seconds. If no press of the SET button is made, the unit will time out and default to the °C or Celsius scale.

### Selecting the °F Scale:

If the SET button is pressed within 15 seconds of connecting the battery to the battery leads, the temperature scale display will toggle to the °F scale indicator and the unit will now default to the °F or Fahrenheit scale (*Figure 14*).

**Note:** The °C/°F temperature scale initialization process must be performed whenever battery power is interrupted or the battery is replaced.

## Cleaning Instructions

This food safety thermometer is sealed to IP54 standards. The unit may be wiped down with a wet sponge or cloth using a mild water based detergent or anti-bacterial soap and rinsed under a gentle stream of cold water (*Figure 15*).

**Note:** This unit is not designed for complete submersion or washing in automated dishwashers.

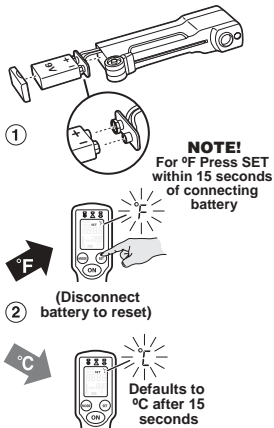


Figure 14


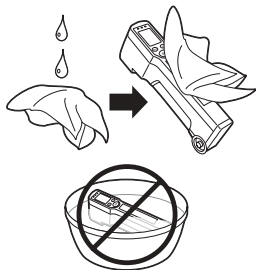


Figure 15

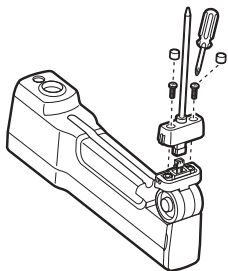


**Figure 16**

## Probe Replacement

The modular probe of the food safety thermometer is replaceable. To replace probe, extend the probe partially to access the rubber caps. Carefully pry up the rubber caps using a pin, and remove the cap using a #2 Phillips screws as shown. Grasp the probe and carefully separate the old probe from the probe base. Install the new probe in the reverse order, firmly tightening the screws and replacing the rubber plugs. The calibration accuracy of the unit is not affected by probe replacement (*Figure 16*).

## Battery Insertion and Replacement

To install a new 9V battery, remove the rubberized battery compartment “plug” at the base of the unit by grasping the sides of the cover and pulling straight out, exposing the battery. Gently shake or tap the base of the unit on your palm to gain access to the battery. The 9V battery of the unit is connected to the polarized snap connector (*Figure 17*).

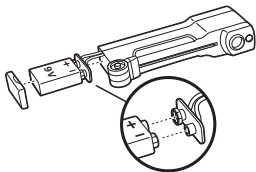

**Figure 17**

**Note:** Each time the battery is installed or replaced, the temperature scale will default to the °C or Celsius scale. To select the °F or Fahrenheit scale see ‘Setting/Changing °C and °F Temperature Scales’.

## Troubleshooting

**Code:** --- (on display)

**Problem:** Target temperature is over or under range

**Action:** Select target within range specifications

**Code:** Battery symbol

**Problem:** Possible low battery

**Action:** Check and/or replace battery

**Code:** Blank display

**Problem:** Possible dead battery

**Action:** Check and/or replace battery

## **Other Operational Considerations**

All models should be protected from the following:

- EMI (Electro Magnetic Interference) from induction heaters and microwave ovens
- Electrostatic discharge
- Should the unit become damaged, check the accuracy of the unit by performing the verification process recommended in this manual. If the unit is out of calibration, do not rely on it for critical temperature measurements.
- Heat from stovetops, pans, or other hot surfaces (don't set it on the stove)

## **Certifications**

CE

This instrument conforms to the following standards:

- EN 61326-1 Electromagnetic Emissions and Susceptibility
- EN 61010-1 General Safety
- IP54